
Hub360 assembly instructions

Start with the support collar, then fit the main clamp above it. Choose four bucket modules for one hub.

ASSEMBLED VIEW

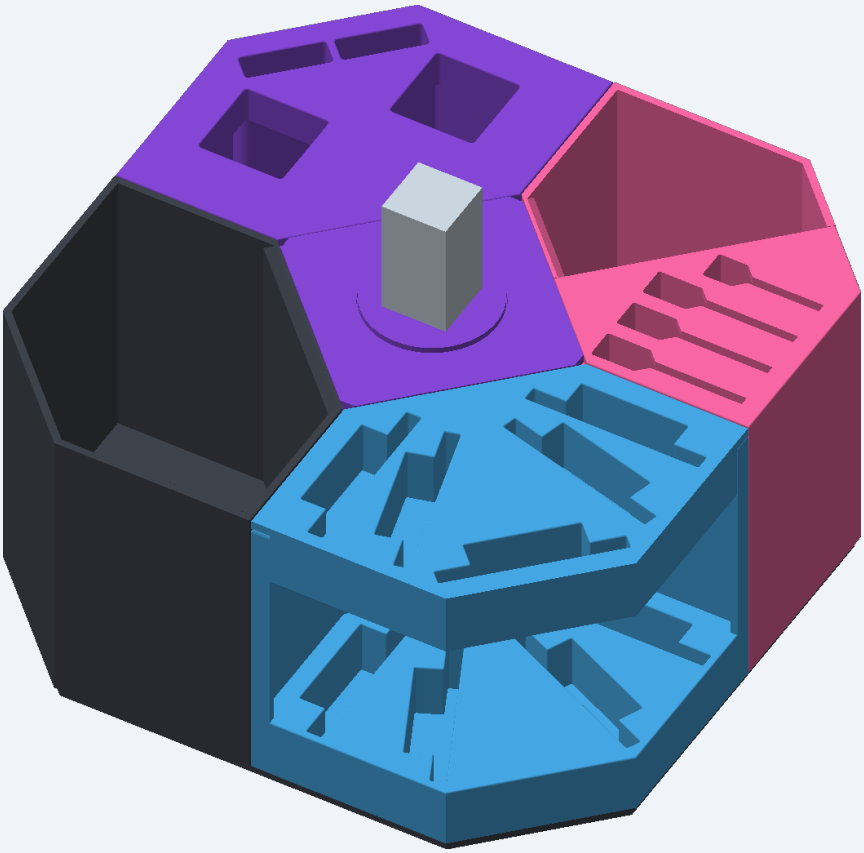

Four example modules shown with the purple centre cap and finishing collar.

Colour key

- **Black**
- **Purple**
- **Blue**
- **Pink**

The base, clamps and concealed parts are shown in black. Both top covers are purple. Bucket colours are examples.


Assembly	Clamps, bearing stack, base, buckets and top covers	02–04
Bucket options	Identify your buckets and see what each one holds	05–07

The illustrations use different colours to help identify the parts. Your Hub360 may be supplied in a different colour combination.

Fit the clamps

Slide the optional support collar onto the upright first. Fit the main clamp above it.

01 Fit the support collar first

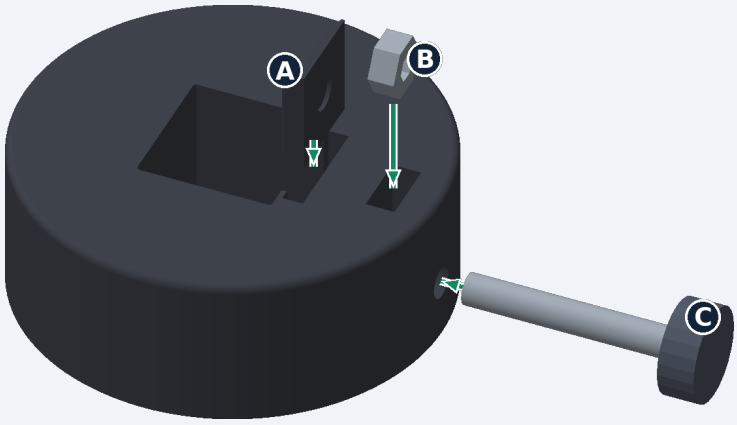

COLLAR VIEWED FROM ABOVE

A **Pressure pad**
Drop it into the wide pocket beside the square opening. Face the small recess towards the screw hole.


B **Plain M6 nut**
Drop it into the separate narrow pocket and line up its threaded hole with the side hole.

C **M6 thumb screw**
Insert it from outside and turn it by hand until the tip meets the pad recess. Leave it loose.


Fit the 28 mm liner into the square opening with its slit facing away from the pad. Slide the collar down the upright.

02 Fit the main clamp above the collar

Wrap the 39.5 mm liner around the upright and place the front and rear clamp halves over it.

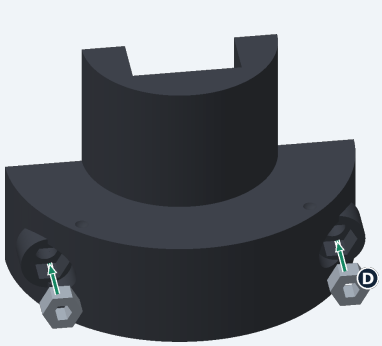

REAR CLAMP HALF

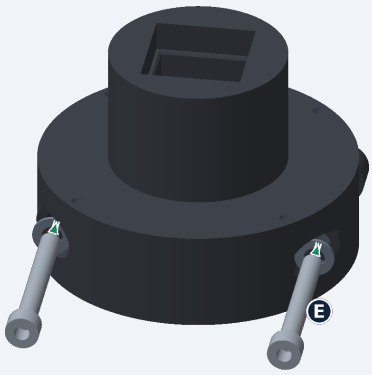

FRONT OF MAIN CLAMP

D **M5 nylon-lock nuts**
Push one nut into each hexagonal pocket on the rear clamp half.

E **M5 bolts and washers**
Put a washer on each M5 × 40 mm bolt. Insert both bolts from the front and tighten evenly with the Allen key.



Allen key included


Slide the support collar up against the main clamp and hand-tighten its thumb screw.

The fasteners and Allen key are shown schematically.

Fit the base and buckets

Build the rotation stack above the fixed main clamp before fitting any buckets.

03 Stack the thrust bearing

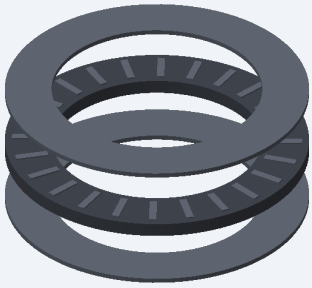

THRUST BEARING AND WASHERS


Place the three pieces flat over the main clamp’s centre sleeve in this order, working upwards.

01 **AS4565 thrust washer**

02 **AXK4565 needle bearing**

03 **AS4565 thrust washer**

04 Lower the 216 mm rotating base

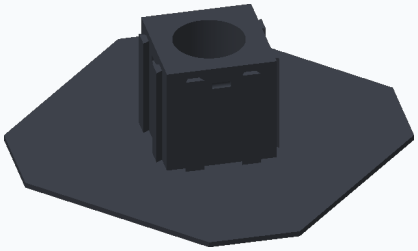


Rotating base

Lower the base over the upright until it rests on the upper thrust washer. The broad plate sits below the upright dovetails.

Turn the base by hand and check that it rotates freely.

05 Slide all four buckets onto the base

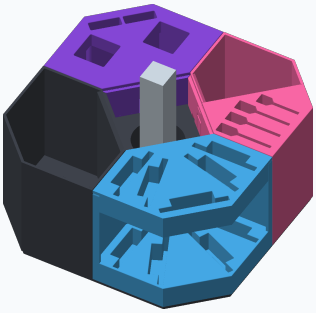

All four buckets fitted

Line up the two fittings on the back of each bucket with the matching pair on the base. Slide the bucket straight down until the catch engages. Repeat for all four buckets.


Release a bucket

Press the catch in the recess at the back of the bucket. Hold it in and lift the bucket straight up.

Fit the guide and top covers


Leave all four buckets in place while you fit the three pieces around the upright.

06 Slide in the anti-wobble guide

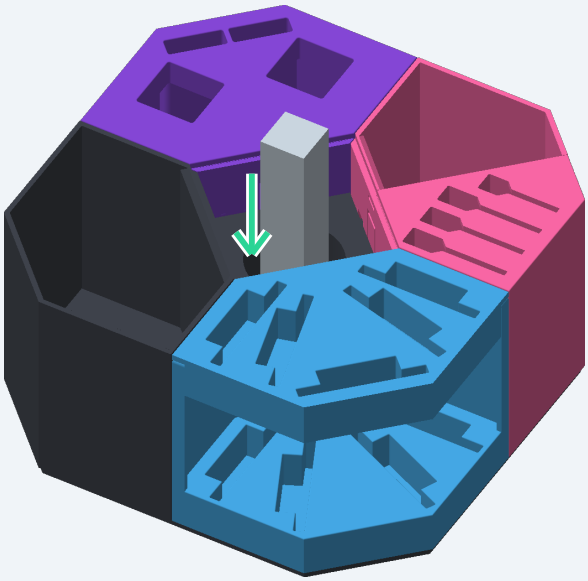


ALL FOUR BUCKETS FITTED / BEFORE THE GUIDE

Anti-wobble guide
Slide the guide down over the upright, long sleeve first. Lower it into the centre of the rotating base until the wide rim sits flat.

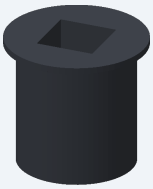

07 Fit the retaining cap and finishing collar

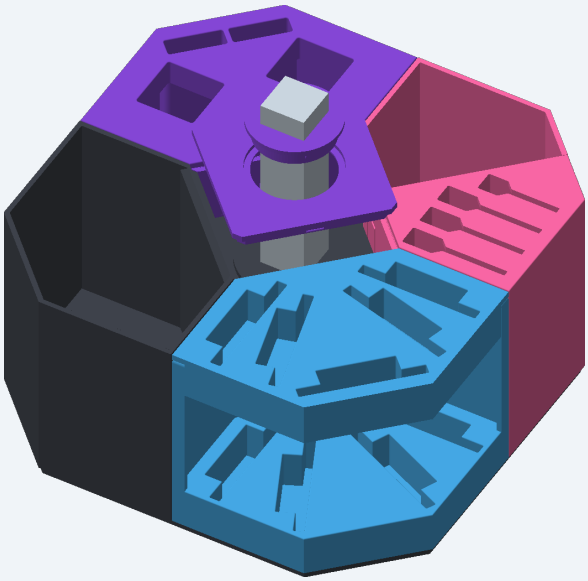

ANTI-WOBBLE GUIDE IN PLACE

1. Centre retaining cap
Lower the square cap over the upright until its catches engage at the bucket backs.


2. Top finishing collar
Slide the round collar into the cap with its wide flange uppermost.

Before loading Rotate the hub by hand and check that each bucket is latched and the top collar sits flush.

Scissors, clippers and brushes


Use these views to identify the tool buckets in your Hub360 set.

Six-scissor bucket

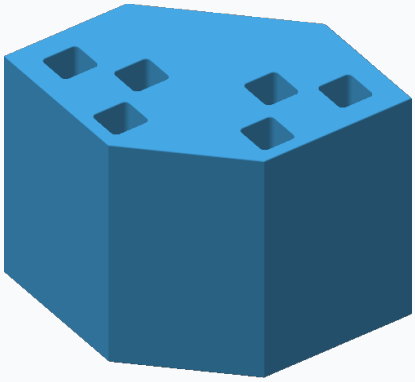


Use the six openings for your scissors. The soft pad at the bottom cushions the tips.

Clipper and trimmer bucket

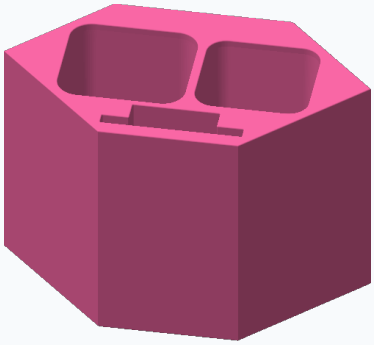

Place your clipper and trimmer in the two holders. The slot across the front holds a blade.

Brush and stripping-knife bucket

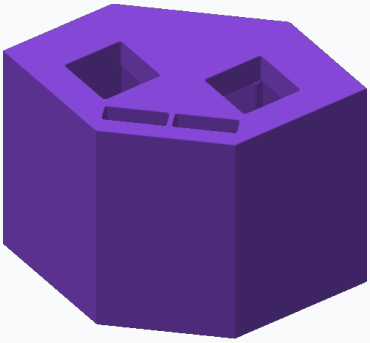


Use the square openings for brushes and the two narrow slots for stripping knives.

Blade and comb buckets


Both buckets come assembled. Fit the whole bucket to the base as shown in step 05.

Nine-blade tray

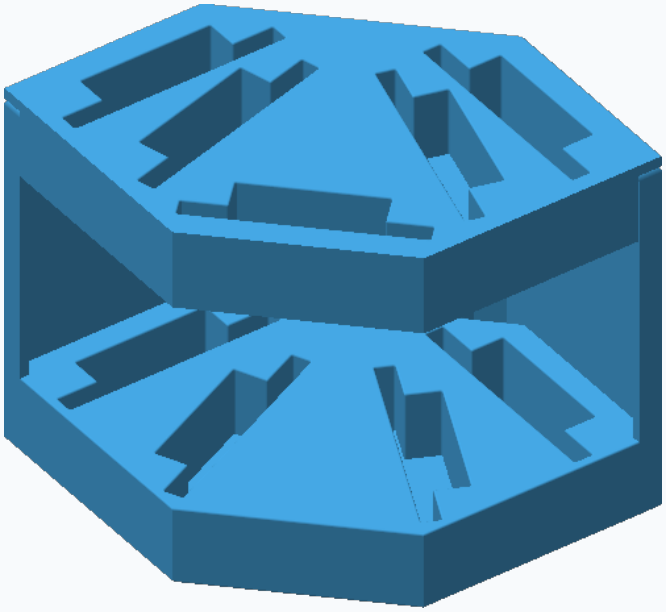

Store up to nine blades. There are five slots on the top tray and four on the lower tray.

Comb half bucket

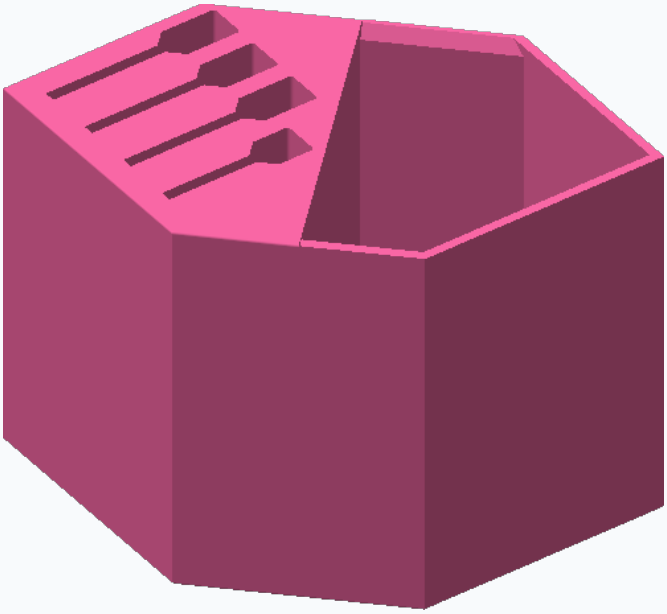


Slide combs into the slotted half. The open half keeps other small items within reach.

Ear cleaner and open bucket


Both fit onto the base in the same way as the other Hub360 buckets.

Ear-cleaner and cotton-pad bucket

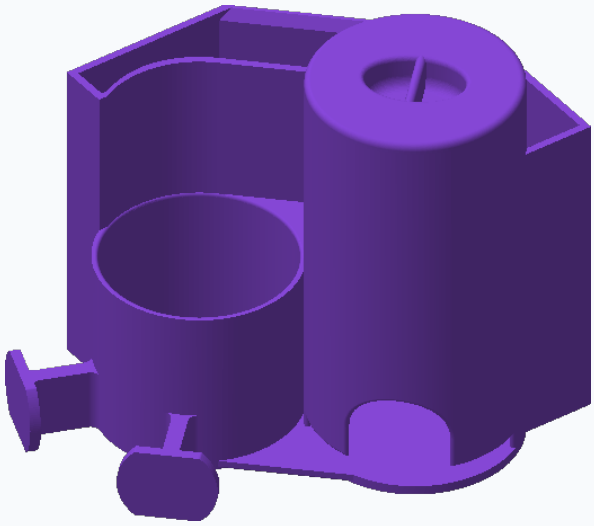


Lift the round lid by its grip to refill the cotton-pad holder. Press it back into place after refilling.

Open bucket

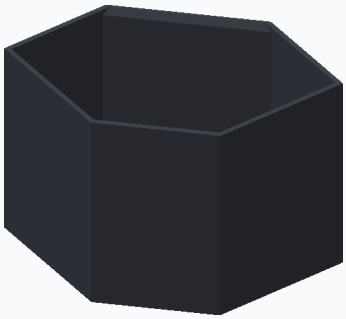

Use the open compartment for tools or supplies you want to reach quickly.

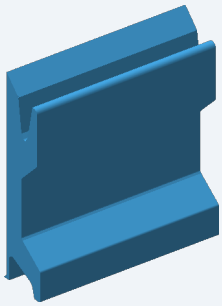

External blade comb holders

OPTIONAL EXTRA

Available as a pair for compatible buckets. The holders fit only at the front left and front right, one on each side.